

PULSE 10 USER INSTRUCTIONS FOR GRADE II 14



In the pre-setup mode, press 1 to open the lock and to activate the silent alarm. In pre-setup, programming can be performed through a Dallas key or by selecting one of the following 4 preloaded configurations (this last is not valid for EM6050):

No. configuration	Maximum number of users	Dual code
0	2	No
1	9	No
2	2	Yes
3	9	Yes

Silent alarm option can be activated in pre-setup mode thanks to a setup Dallas key, or in any moment by simply connecting an alarm interface with the lock and entering an opening code.

Select a keypad configuration (only in pre-setup status)

- Press the key 2 for few seconds, enter the code 555555 and select the desired configuration number.
- At the end of the configuration only the Manager is installed, with code 123456.
- If all users are blocked and only the Manager code is enabled, the time delay function is not available.

Manager 123456 + Optional Dallas key Open, program and change its own code
Users xxxxxx + Optional Dallas key Open and change its own code

Dallas key

In the event that the user is composed of "code + Dallas key", after entering the code, the Dallas key must be placed on the appropriate Dallas key reader.

Override user

The override user 9 opens without waiting the time delay. In the default programming they are set in dual code opening but, upon request, the single opening mode can also be set.

Silent alarm

It is activated by increasing the last digit by one number when entering the opening code.



Penalty

After four attempts to enter an incorrect code, the lock starts a 4-minute delay period. Each attempt to enter the code within the 4 minutes delay period restarts the count.

Low battery warning

A long beep during opening indicates a low battery level.
 Replace immediately the low battery with a new Alkaline battery.

Sound signals

A double beep  normally indicates a correct operation. A long beep  indicates an incorrect operation and the end of the operation itself.

Recommendations

Do not use easily identifiable codes such as 123456, dates of birth or other personal information.

Opening (It is recommended to change the factory code before use and to safely store the new code)

Enter the opening code (default Manager code 123456).

If the code is correct, the keypad will beep twice.

If programmed, the time delay count starts. The LED flashes every 2 seconds.

A beep every 2 seconds indicates the end of the time delay count.

Enter the opening code. The keypad beeps twice.

Open the safe door within 4 seconds (with motorlock EM6050, 2 beeps and 2 LED flashes are produced when the lock re-closes).

Dual code opening (It is recommended to change the factory code before use and to safely store the new code)



Enter the first opening code.

If programmed, the time delay count starts. The LED flashes every 2 seconds.

A beep every 2 seconds indicates the end of the time delay count.

Enter both opening codes. The keypad beeps twice.

Open the safe door within 4 seconds.

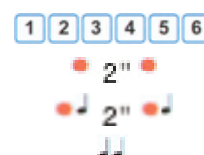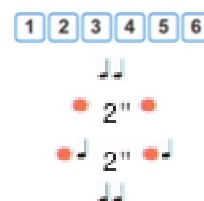

PULSE 10 USER INSTRUCTIONS FOR GRADE II 14



Change code *(Safely store the new code and perform various opening / closing tests before closing the safe door)*

To be performed with the door open!

Press and hold **0** until the double beep. The LED remains on.

Enter the **old code**.

Enter the **new code**.

Confirm the **new code**.

Perform various opening / closing tests before closing the safe door.



Activate a new user

Press and hold **1** until the double beep. The LED remains on.

Enter the Manager code.

Enter the number of the user to be installed (from 1 to 9).

If the user is available, the keypad beeps twice.

Enter the code to be associated with the user (and the Dallas key if necessary).

Enter again the code to confirm it (and the Dallas key if necessary).

 


Disable/Enable users *(Function not available if the dual code opening is activated)*

Press and hold **2** until the double beep. The LED remains on.

Enter the Manager code. The keypad beeps twice.

All users are disabled/enabled.



Delete an user

Press and hold **3** until the double beep. The LED remains on.

Enter the Manager code.

Press the key corresponding to the user to be deleted (from 1 to 9).

The keypad beeps twice. The user is deleted.



Membrane test

Press and hold **5** until the double beep. The LED remains on.

Enter the sequence of numbers from 1 to 0. A confirmation beep is given for each key.

A damaged key is indicated with a long beep.



Time delay *(Time Delay programmable from 0 to 99 minutes; Open Window from 1 to 19 minutes)*

Press and hold **9** until the double beep. The LED remains on.

Enter the Manager code. The keypad beeps twice.

Enter the values for the time delay and the open window in two digits (e.g. 10 and 05).

Confirm the values for the time delay and the open window in two digits (e.g. 10 and 05).



Attention, the time delay can only be lowered in the open window.

Further information

For the complete manual and further information on the product's features, please visit www.tecnosicurezza.it



GLOBAL HEADQUARTERS
Tecnosicurezza SpA
Via Cesare Battisti, 276
37057 San Giovanni Lupatoto
Verona
Tel. +39 045 826 64 70
Fax. +39 045 826 64 69
info@tecnosicurezza.it

USA HEADQUARTERS
Tecnosicurezza Inc.
50, Thomas Lane
Versailles, KY 40383
Tel. +1 859 490 89 30
info@usatecno.com

SPAIN HEADQUARTERS
Tecnosicurezza Sa
C/Menor, 4 - Nave 10
Pol. Ind La Mina 28770
Colmenar Viejo
Tel. +34 91 804 33 91
Fax. +34 91 804 32 63
info@tecnosicurezza.es