



**Chubb**safes

*Trusted the world over.*

# ZETA LOCK

## USER INSTRUCTIONS



**INSAFE HELPDESK**

**0800 52 63 88**

**helpdesk@insafe.co.uk**



# ZETA USER INSTRUCTIONS



[WATCH THE ZETA TUTORIAL HERE](#)

*The ChubbSafes Zeta Keypad has 2 codes available*

*Master Code – Full Access*

*User Code – Opens the safe*

*Default Master Code is 1-2-3-4-5-6 (lock beeps twice to confirm successful code entered)*

## ADD OR CHANGE USER CODE

Open the safe using the current Master Code.

Press and hold 1 – the lock will beep twice, and the red LED will stay lit.

Enter the current Master Code.

Enter your **NEW** 6-digit User Code.

Repeat your **NEW** 6-digit User Code.

The lock will beep twice, and the LED will go out to indicate code change.

Test several times with the door open to ensure new code is stored correctly.

## DELETE USER CODE

Enter the current Master Code and open the safe.

Within 10 seconds, press and hold 3 – the lock will beep twice, and the red LED will stay lit.

Enter the current Master Code – the lock will beep twice, and the red LED will go out.



# ZETA USER INSTRUCTIONS



[WATCH THE ZETA TUTORIAL HERE](#)

## CHANGE THE MASTER CODE

Enter the current Master Code and open the safe.

Within 10 seconds Press and hold 0 – the lock will beep twice, and the red LED will stay lit.

Enter the current Master Code.

Enter your **NEW** 6-digit Master Code.

Repeat your **NEW** 6-digit Master Code.

The lock will beep twice, and the LED will go out to indicate code change.

Test several times with the door open to ensure new code is stored correctly.



**Chubb**safes

*Trusted the world over.*

**INSAFE.COM**

**SALES & SERVICE • SALES@INSAFE.CO.UK**

**0800 52 63 88**

**Insafe International Limited**

**Insafe house, Decimus park, Kingstanding way, Tunbridge wells TN2 3GP**

**01892 533 000**