



Chubbsafes
Trusted the world over.

KEY SAFE ELECTRONIC LOCK

USER INSTRUCTIONS



INSAFE HELPDESK

0800 52 63 88

helpdesk@insafe.co.uk



KEY SAFE ELECTRONIC LOCK USER INSTRUCTIONS

Opening the safe for the first time

Press either side of the emergency cover located on the lower section on the face of the keypad. Insert your emergency key into the designated keyhole and turn it counterclockwise. Turn the outer rim of the lock clockwise while holding the key in place. The door will then open.

OPENING THE SAFE

1. Input the user's code 1234 or master code 19980818, then press #. The lock will flash **X** twice followed by **O**. Turn the outer rim clockwise to open the door.
2. If the code entered is incorrect, **X** will flash three times with three beeps.

! If three invalid code attempts are made in succession, it will beep for 20 seconds. If six invalid code attempts are made in succession, beeps will be constant until it is powered down.

CLOSING THE SAFE

1. Close the door with outer rim turned fully clockwise so the bolts are retracted.
2. Once door is closed, turn the outer rim fully counterclockwise (check by attempting to turn the keypad clockwise - do not force).

SETTING THE USER CODE

1. With the door open, slide away the battery cover located on the inside of the door. Press the reset button **reset** once.
2. **X** will flash twice with two beeps which signals you are ready to set your user code.
3. Input your new user code (3-8 digits), then press # to confirm it.
4. **X** will flash twice with two beeps if user code registration is successful. However, 3 flashes and 3 beeps indicates user code registration failed.

! Please note that if the setting of user or master code is inactive for more than 8 seconds, the setting mode will time out and progress will be lost.

SETTING THE MASTER CODE

1. With the door open, press "0" twice and then the reset **reset** button. **X** Will flash twice with two beeps which signals you are ready to set your master code.
2. Input your new master code (3-8 digits), then press # to confirm it.
3. **X** will flash twice with two beeps if user code registration is successful. However, 3 flashes and 3 beeps indicates user code registration failed.

! Please note that if the setting of user or master code is inactive for more than 8 seconds, the setting mode will time out and progress will be lost.



SILENT MODE

Enable silent mode

Press 1 and #, **X** will flash twice with no beeps indicating that silent mode is on.

Disable silent mode

Press 1 and #, **X** will flash twice with two beeps indicating that silent mode is off.

! Please note that when silent mode is enabled, key press beeps and indicator sounds of correct operation are muted.

ALARM DEVICE

1. Keep the door closed
2. Press 0 then press #, this places the safe in an alert state.
3. When in alert state, the alarm will sound for 3 minutes when the safe is heavily shaken.
4. To stop the alarm, enter your user code and open the door.

SYSTEM INITIALISATION/DELETION

Press the reset button and hold for about 5 seconds until you hear two beeps. This indicates that the memory of all recorded codes have been erased.



Chubbsafes

Trusted the world over.

INSAFE.COM

SALES & SERVICE • SALES@INSAFE.CO.UK

0800 52 63 88

Insafe International Limited

Insafe house, Decimus park, Kingstanding way, Tunbridge wells TN2 3GP

01892 533 000